


RYOBI®

RLT26C

STRING TRIMMER

OPERATOR'S MANUAL (Original Instructions)

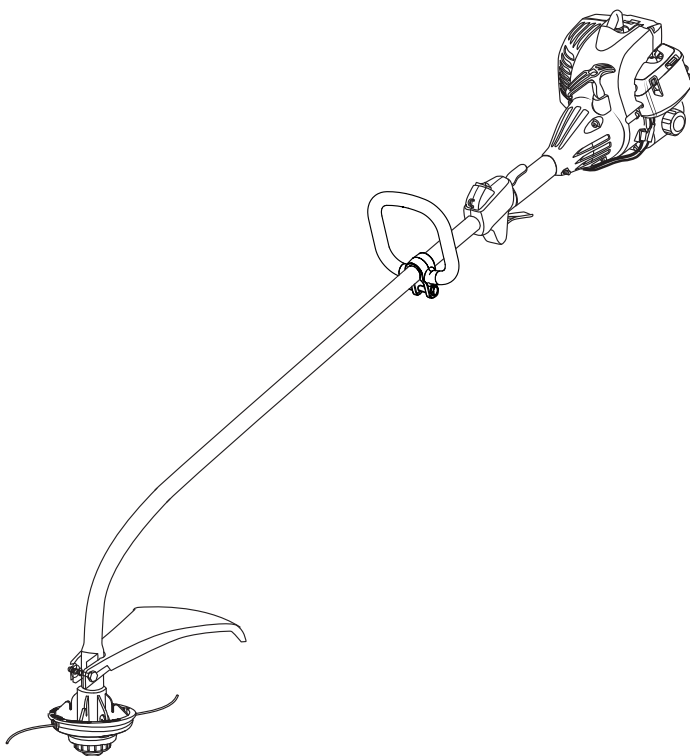















Important!

It is essential that you read the instructions in this manual before assembling, maintaining and operating this machine.
Subject to technical modifications.













English (Original Instructions)

SYMBOLS




Important: Some of the following symbols may be used on your tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

	NAME	EXPLANATION
	Safety Alert Symbol	Indicates danger, warning or caution. It means attention! Your safety is involved.
	Read Your Operator's Manual	Your manual contains special messages to bring attention to potential safety concerns as well as operating and servicing information. Please read all the information carefully to ensure satisfaction and safe use.
	Wear eye, hearing and head protection	Wear eye, hearing and head protection when operating this equipment.
	Keep bystanders away	Beware of thrown or flying objects. Keep all bystanders at least 15 m away.
	No blade	Do not use blade(s) on the product.
	RPM Decal	Rotational direction and maximum speed of the shaft for the cutting attachment.
	Boots	Wear non-slip safety footwear when using this equipment.
	Gloves	Wear non-slip, heavy-duty gloves.
	No Smoking	Do not smoke when mixing fuel or filling fuel tank.
	Petrol	Use unleaded gasoline intended for motor vehicle use with an octane rating of 91 ((R+M)/2) or higher.
	Oil	Use synthetic 2-stroke oil for air cooled engines.
	Mix Petrol and Oil	Mix the fuel mix thoroughly and also each time before refuelling.
	Switch	On/Off Switch I = ON to Run O = OFF to Stop
		Conforms to all regulatory standards in the country in the EU where the product is purchased.

English (Original Instructions)

	NAME	EXPLANATION
		Guaranteed sound power level is 108 dB.
		Run position
		Set the choke lever to "FULL" choke position.
		Set the choke lever to "HALF" choke position.
		Set the ignition switch to the "I" (ON) position.
		Press the primer bulb 10 times.
		Pull the starter grip to start.
		Squeeze the throttle lock and throttle trigger to run.
		Waiting time 10 seconds
		To stop the engine, move the ignition switch to the "O" stop position .
		Keep hands away from blades.
		EurAsian Conformity Mark

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without safety alert symbol) Indicates a situation that may result in property damage.

English (Original Instructions)

Thank you for buying a Ryobi trimmer.

Your new trimmer has been engineered and manufactured to Ryobi's high standard for dependability, ease of operation, and operator safety. Properly cared for, it will give you years of rugged, trouble-free performance.

INTENDED USE

This product is only intended for use outdoors in a well ventilated area.

The product is intended for cutting long grass, weed, and similar vegetation at or about ground level. The cutting plane should be approximately parallel to the ground surface. The product should not be used to cut or trim hedges, bushes or other vegetation where the cutting plane is not parallel to the ground surface.



WARNING

To reduce the risk of injury, the user must read and understand the operator's manual.



WARNING

Do not attempt to operate this trimmer until you have read thoroughly and understood completely all instructions, safety rules etc contained in this manual. Failure to comply may result in accidents involving fire, electric shock or serious personal injury. Save operator's manual and review frequently for continuing safe operation, and instructing others who may use this tool.

READ ALL INSTRUCTIONS.

GENERAL SAFETY RULES

- Some regions have regulations that restrict the use of the product. Check with your local authority for advice.
- Do not allow children or untrained individuals to use this unit.
- Never start or run the engine in a closed or poorly ventilated area; breathing exhaust fumes can kill.
- Clear the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the string head.
- Wear full eye and hearing protection while operating this unit.
- Wear heavy long pants, boots, and gloves. Do not wear loose fitting clothing, short pants, jewellery of any kind, or use with bare feet.
- Secure long hair so it is above shoulder level to prevent entanglement in any moving parts.
- Keep all bystanders, children, and pets at least 15 m away.
- Do not operate this unit when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- Do not operate in poor lighting.
- Keep firm footing and balance. Do not overreach. Overreaching can result in loss of balance or exposure to hot surfaces.
- Keep all parts of your body away from any moving part.
- Do not touch area around the muffler or cylinder of the trimmer, these parts get hot from operation.
- Always stop the engine and remove the spark plug wire before making any adjustments or repairs except for carburetor adjustments.
- Inspect the unit before each use for loose fasteners, fuel leaks, etc. Replace any damaged parts before use.
- It has been reported that vibrations from hand-held tools may contribute to a condition called Raynaud's Syndrome in certain individuals. Symptoms may include tingling, numbness and blanching of the fingers, usually apparent upon exposure to cold.
Hereditary factors, exposure to cold and dampness, diet, smoking and work practices are all thought to contribute to the development of these symptoms.
It is presently unknown what, if any, vibrations or extent of exposure may contribute to the condition. There are measures that can be taken by the operator to possibly reduce the effects of vibration:
 - a) Keep your body warm in cold weather. When operating the unit wear gloves to keep the hands and wrists warm. It is reported that cold weather is a major factor contributing to Raynaud's Syndrome.
 - b) After each period of operation, exercise to increase blood circulation.
 - c) Take frequent work breaks. Limit the amount of exposure per day.
If you experience any of the symptoms of this condition, immediately discontinue use and see your physician about these symptoms.
- Keep the tool well maintained, fasteners tightened and worn parts replaced.
- Mix and store fuel in a container approved for fuel.
- Mix fuel outdoors where there are no sparks or flames. Wipe up any fuel spillage. Move 9 m away from refueling site before starting engine.
- Stop the engine and allow to cool before refueling or storing the unit.
- Allow the engine to cool; empty the fuel tank and secure the unit from moving before transporting in a vehicle. Secure the unit during transport to prevent damage or injury.

English (Original Instructions)

- Comply with local regulations in the use of the product.



WARNING

Injuries may be caused, or aggravated, by prolonged use of a tool. When using any tool for prolonged periods, ensure you take regular breaks.

SPECIFIC SAFETY RULES FOR TRIMMER USE

- Replace string head if cracked, chipped, or damaged in anyway. Be sure the string head is properly installed and securely fastened. Failure to do so can cause serious injury.
- Make sure all guards, straps, deflectors and handles are properly and securely attached.
- Use only the manufacturer's replacement line in the cutting head. Do not use any other cutting attachment. Failure to do so can result in serious personal injury.
- Never operate unit without the safety guard in place and in good condition.
- Maintain a firm grip on both handles while trimming. Keep string head below waist level. Never cut with the string head located over 76 cm or more above the ground.



WARNING

Inspection after dropping or other impacts: Thoroughly inspect the product and identify any affections or damage with it. Any part that is damaged should be properly repaired or replaced by an authorized service centre

RESIDUAL RISKS

Even when the machine is used as prescribed, it is still impossible to completely eliminate certain residual risk factors. The following hazards may arise in use and the operator should pay special attention to avoid the following:

- Injury caused by vibration. Hold the tool by designated handles and restrict working time and exposure.
- Exposure to noise can cause hearing injury. Wear ear protection and limit exposure.
- Eye injury due to flying debris. Wear eye protection at all times.

SPECIFICATION

Weight	
- Without fuel and cutting attachment	4.4 kg
- Without fuel with string head	4.6 kg

Fuel tank volume	250 cm ³ or (0.25L)
Cutting swath	432 mm
Engine displacement	26 cm ³ / cc
Line diameter	2.4 mm
Maximum engine performance (in accordance with ISO 8893)	0.65 kW
Maximum rotational frequency of the spindle	12,000 min ⁻¹
Engine speed (rotational frequency) at recommended max. spindle rotational frequency	12,000 min ⁻¹
Engine speed (rotational frequency) at idle	2,800-3,800 min ⁻¹
Fuel consumption (in accordance with ISO 8893) at max. engine performance	0.33 kg/h or (0.45 L/h)
Specific fuel consumption (in accordance with ISO 8893) at max. engine performance	508 g/kW.h or (0.7 L/ kW.h)
Vibration (in accordance with ISO 22867):	
Front handle	
- Idling	4.4 m/s ²
- Racing	14.0 m/s ²
- Equivalent vibration total value	10.4 m/s ²
Rear handle	
- Idling	5.7 m/s ²
- Racing	8.7 m/s ²
- Equivalent vibration total value	7.4 m/s ²
Uncertainty K	1.5 m/s ²
Noise emission (in accordance with ISO 22868)	
A-weighted emission sound pressure level at the operator position	
- Idling	72.5 dB (A)
- Racing	99.0 dB (A)
- Equivalent A-weight emission sound pressure level	96.0 dB (A)
A-weighted sound power level	
- Idling	85.4 dB (A)

English (Original Instructions)

- Racing	106.3 dB (A)
- Equivalent A-weight sound power level	106.3 dB (A)
Uncertainty K	2.5 dB

DESCRIPTION

Please refer to the figure sheet.

1. Primer Bulb
2. Choke Lever
3. Fuel Cap
4. Starter Grip
5. Throttle Lock
6. On / Off Switch
7. Throttle Trigger
8. Rear Handle
9. Front handle
10. Shaft
11. Deflector
12. String Head
13. Cutting Line
14. Idle Speed Screw
15. Spool retainer
16. Bolt
17. Wing nuts
18. Flat washer
19. Wrench (not provided)
20. Paper tube
21. Hex nut

ASSEMBLY

Please refer to Fig. 2.

UNPACKING

This product requires assembly.

1. Carefully remove the tool and any accessories from the box. Make sure that all items listed in the packing list are included.
2. Inspect the tool carefully to make sure no breakage or damage occurred during shipping.
3. Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.
4. If any parts are damaged or missing, do not operate this tool until the parts are replaced. Failure to heed this warning could result in serious personal injury.

PACKING LIST

- Trimmer
- Front handle assembly
- Safety guard assembly

- Cutting head assembly
- Operator's manual



WARNING

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.



WARNING

To prevent accidental starting that could cause serious personal injury, always disconnect the engine spark plug wire from the spark plug when assembling parts.



WARNING

Never attach or adjust any attachment while power head is running. Failure to stop the engine may cause serious personal injury.



WARNING

Be certain the knob is fully tightened before operating equipment; check it periodically for tightness during use to avoid serious injury.

ATTACHING THE FRONT HANDLE (FIG. 2A)

1. Remove the bolt, flat washer, and wing nut from the front handle.
2. Mount the front handle in front of the foam part.
3. Replace the bolt, flat washer, and wing nut. Tighten the wing nut.

ATTACHING THE DEFLECTOR (FIG. 2B)

1. Loosen the hex nut.
2. Insert the shaft into the deflector.
3. Tighten the hex nut.

INSTALLING THE STRING HEAD (FIG. 2C)

1. Remove the paper tube.
2. Place the middle of the line under the hook/notch inside the spool.
3. Feed the ends of the line through the eyelets on the side of the Pro-cut I fixed line head.
4. Pull the line outwards so it is tight and even on both sides of the spool.
5. Install Pro-cut™ head assembly on drive shaft. Secure with spool retainer.

English (Original Instructions)

OPERATION

FUEL AND REFUELING

HANDLING THE FUEL SAFELY

- Always handle fuel with care, it is highly flammable.
- Always refuel outdoors where there are no sparks and flames. Do not inhale fuel vapors.
- Do not let petrol or oil come in contact with your skin.
- Keep petrol and oil away from the eyes. If petrol or oil comes in contact with the eyes, wash them immediately with clean water. If irritation is still present, see a doctor immediately.
- Clean up spilled petrol immediately.

MIXING THE FUEL (FIG. 3)

- This product is powered by a 2-stroke engine and requires pre-mixing petrol and 2-stroke oil. Pre-mix unleaded petrol and 2-stroke engine oil in a clean container approved for petrol.
- This engine is certified to operate on unleaded petrol intended for automotive use with an octane rating of 91 ((R + M) / 2) or higher.
- Do not use any type of pre-mixed petrol / oil from fuel service stations, this includes the pre-mixed petrol / oil intended for use in mopeds, motorcycles, etc.
- Use synthetic 2-stroke oil only. Do not use automotive oil or 2-stroke outboard oil.
- Mix 2% synthetic 2-stroke oil into the petrol. This is a 50:1 ratio.
- Mix the fuel thoroughly and also each time before fueling.
- Mix in small quantities. Do not mix quantities larger than usable in a 30 day period. Synthetic 2-stroke oil containing a fuel stabilizer is recommended.



1 Litre	+	20 ml	=	} =50:1 (2%)
2 Litres	+	40 ml	=	
3 Litres	+	60 ml	=	
4 Litres	+	80 ml	=	
5 Litres	+	100 ml	=	

FILLING THE TANK

- Clean surface around fuel cap to prevent contamination.
 - Loosen fuel cap slowly to release pressure and to keep fuel from escaping around the cap.
 - Carefully pour fuel mixture into the tank. Avoid spillage.
 - Prior to replacing the fuel cap, clean and inspect the gasket.
 - Immediately replace fuel cap and hand tighten. Wipe up any fuel spillage. Move 9 m away from refueling site before starting engine.
- Note:** It is normal for smoke to be emitted from a new engine during and after first use.



WARNING

Always shut off engine before fueling. Never add fuel to a machine with a running or hot engine. Move at least 9 m from refueling site before starting engine. Do not smoke!

STARTING AND STOPPING (FIG. 4)



WARNING

Never start or run the engine inside a closed or poorly ventilated area; breathing exhaust fumes can kill.

NOTE: Be sure to return the stop switch to the "I" (RUN) position before trying to start unit.

To start a cold engine:

1. Press the primer bulb 10 times.
NOTE: After the 7th press, the fuel should be visible in the primer bulb. If not, continue pressing until the fuel is visible.
2. Set the choke lever to **I-II** choke position.
3. Keeping the throttle trigger squeezed completely and pull the starter grip until the engine attempts to start. Do not pull the starter grip more than 4 times.
4. Set the choke lever to **I-II** choke position.
5. Pull the starter grip until the engine starts. Do not pull the starter grip more than 6 times.
NOTE: If the engine does not start, repeat the procedure from step 2.
6. Allow the engine to run for 10 seconds, then set the choke lever to **III** position.

To start a warm engine:

1. Press the primer bulb 10 times.
2. Set the choke lever to **III** position.
3. Squeeze the throttle trigger completely and pull the starter grip until the engine starts.

English (Original Instructions)

To stop the engine:

Toggle the switch to the "o" (off) position.

OPERATING THE TRIMMER (FIG. 5)

Hold the trimmer with the right hand on the rear handle and the left hand on the front handle. Keep a firm grip with both hands while in operation. Trimmer should be held at a comfortable position with the rear handle about hip height.

Always operate trimmer at full throttle. Cut tall grass from the top down. This will prevent grass from wrapping around the shaft housing and string head which may cause damage from overheating. If grass becomes wrapped around the string head, stop the engine, disconnect the spark plug wire, and remove the grass. Prolonged cutting at partial throttle will result in oil dripping from the silencer.

CUTTING TIPS (FIG. 6)

When cutting make sure the cutter head is at a slight angle as shown while still approximately parallel to the ground surface. In tall grass cut from the top down to ensure the moving parts do not get tangled with the long grass.

Move the head in steady strokes from right to left as you work through the grass.

MAINTENANCE



WARNING

Use only original manufacturer's replacement parts, accessories and attachments. Failure to do so can cause possible injury, poor performance and may void your warranty.



WARNING

The cutting attachment must not work in idle mode. If this requirement is not satisfied, the clutch has to be adjusted or the machine needs an urgent maintenance by a qualified technician.

- You may make adjustments and repairs described here. For other repairs, have the trimmer serviced by an authorised service agent.
- Consequences of improper maintenance may include excess carbon deposits resulting in loss of performance and discharge of black oily residue dripping from the silencer.
- Make sure all guards, straps, deflectors and handles are properly and securely attached to avoid the risk of personal injury.

LINE REPLACEMENT (FIG. 9)

- Ensure the unit is in the off position

- Unlock the spool retainer as shown and remove the spool.
- Take one 500 mm length of 2.4 mm thick monofilament precut line.
- Place the middle of the line under the hook/notch inside the spool.
- Feed the ends of the line through the eyelets on the side of the Pro-cut I fixed line head.
- Pull the line outwards so it is tight and even on both sides of the spool.
- Install Pro-cut™ head assembly on drive shaft. Secure with spool retainer.

CLEANING THE EXHAUST PORT AND SILENCER

Depending on the type of fuel used, the type and amount of oil used, and/or your operating conditions, the exhaust port and silencer may become blocked with carbon deposits. If you notice a power loss with your petrol powered tool, a qualified service technician will need to remove these deposits to restore performance.

CLEANING THE AIR FILTER (FIG. 7)

For proper performance and long life, keep the air filter clean.

- Ensure the unit is in the off position.
- Remove the air filter cover.
- Remove the air filter and clean it with warm soapy water.
- Rinse, and let the air filter dry completely.
- Work two drops of lubricant into the air filter.
- Replace the air filter (fits only one way).
- Replace the air filter cover.

NOTE: The air filter should be replaced annually for the best performance.

FUEL CAP



WARNING

A leaking fuel cap is a fire hazard and must be replaced immediately.

The fuel cap contains a non-service able filter and a check valve. A clogged fuel filter will cause poor engine performance. If performance improves when the fuel cap is loosened, check valve may be faulty or filter clogged.

Replace fuel cap if required.

SPARK PLUG REPLACEMENT (FIG. 8)

This engine uses a Champion RCJ-6Y or equivalent spark plug with 0.63 mm electrode gap. Use an exact replacement and replace annually.

English (Original Instructions)

STORAGE (1 MONTH OR LONGER)

- Drain all fuel from tank into a container approved for fuel. Run engine until it stops.
- Clean all foreign material from the trimmer. Store it in a well-ventilated place that is inaccessible to children. Keep away from corrosive agents such as garden chemicals and de-icing salts.
- Abide by all ISO and local regulations for the safe storage and handling of fuel. Excess fuel should be used up in other 2-stroke engine powered equipment.

English (Original Instructions)

TROUBLESHOOTING

IF THESE SOLUTIONS DO NOT SOLVE THE PROBLEM, CONTACT YOUR AUTHORISED SERVICE DEALER.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Engine will not start.	<p>Power switch is off.</p> <p>No spark.</p> <p>No fuel.</p> <p>Engine is flooded.</p> <p>Starter rope is harder to pull now than when it was new.</p>	<p>Make sure Switch is in the ON or "I" position</p> <p>The spark plug may be damaged, remove it and check for dirt and cracks. Replace with a new spark plug.</p> <p>Push primer bulb until bulb is full of fuel. If bulb does not fill, primary fuel delivery system is blocked. Contact a servicing dealer. If primer bulb fills, engine may be flooded, proceed to next item.</p> <p>Remove spark plug, turn unit so spark plug hole is aimed at the ground. Set start lever to "☞" position and pull starter cord 10 to 15 times. This will clear excess fuel from engine. Remove any fuel which splashed on the product. Clean and reinstall spark plug. Clean up any spilled fuel and move at least 9m away before restarting. Pull starter three times with start lever at "☞". If engine does not start, set start lever to "I" position and repeat normal starting procedure. If engine still fails to start, repeat procedure with a new spark plug.</p> <p>Contact a servicing dealer.</p>
Engine starts but will not idle long enough to engage throttle	Temperature can effect engine idle time and rpm.	Flip start lever to RUN "☞" position and pull starter until engine starts.
Engine does not stop when switch is turned off	Electrical connection is loose/unplugged	Set the start lever to CHOKE "I" to stop the engine. Immediately stop using the product. Check electrical connection on the bottom of the trimmer and make sure it is properly connected. Contact servicing dealer if the problem persists.
Engine starts but will not accelerate.	Engine requires approximately three minutes to warm up.	Allow engine to completely warm up. If engine does not accelerate after three minutes, contact a servicing dealer.
Engine starts but will only run at high speed at half choke.	Carburetor requires adjustment.	Contact a servicing dealer.
Engine does not reach full speed and emits excessive smoke.	<ol style="list-style-type: none"> 1. Check oil fuel mixture. 2. Air filter is dirty. 3. Spark arrestor screen is dirty. 	<ol style="list-style-type: none"> 1. Use fresh fuel and the correct 2-stroke oil mix. 2. Clean air filter. Refer to Cleaning the Air Filter earlier in this manual. 3. Contact a servicing dealer.
Engine starts, runs, and accelerates but will not idle.	Idle speed screw on carburetor requires adjustment	Contact servicing dealer if the problem persists.

English (Original Instructions)

<p>Grass wraps round shaft housing and string head.</p>	<ol style="list-style-type: none"> 1. Cutting tall grass at ground level. 2. Operating trimmer at part throttle. 	<ol style="list-style-type: none"> 1. Cut tall grass from the top down. 2. Operate trimmer at full throttle.
<p>Oil drips from silencer.</p>	<ol style="list-style-type: none"> 1. Operating trimmer at part throttle. 2. Check oil/fuel mixture. 3. Air filter dirty. 	<ol style="list-style-type: none"> 1. Operate trimmer at full throttle. 2. Use fresh fuel and the correct synthetic 2-stroke oil mix. 3. Clean per instruction in Maintenance Section.

GUARANTEE

In addition to any statutory rights resulting from the purchase, this product is covered by a guarantee as stated below.

1. The guarantee period is 24 months for consumers and commences on the date when the product was purchased. This date has to be documented by an invoice or other proof of purchase. The product is designed and dedicated to consumer and private use only. So there is no guarantee provided in case of professional or commercial use.
2. There is, in some cases (i.e. promotion, range of tools), a possibility to extend the warranty period over the period described above using the registration on the www.ryobitools.eu website. The eligibility of the tool is clearly displayed in stores and/or on packaging. The end user needs to register his/her newly-acquired tools online within 8 days from the date of purchase. The end user may register for the extended warranty in his country of residence if listed on the online registration form where this option is valid. Furthermore, end users must give their consent to the storage of the data which are required to enter online and they have to accept the terms and conditions. The registration confirmation receipt, which is sent out by e-mail, and the original invoice showing the date of purchase will serve as proof of the extended warranty. Your statutory rights remain unaffected.
3. The guarantee covers all defects of the product during the warranty period due to defaults in workmanship or material at the purchase date. The guarantee is limited to repair and/or replacement and does not include any other obligations including but not limited to incidental or consequential damages. The warranty is not valid if the product has been misused, used contrary to the instruction manual, or being incorrectly connected. This guarantee does not apply to:
 - any damage to the product that is the result of improper maintenance
 - any product that has been altered or modified
 - any product where original identification (trade mark, serial number) markings have been defaced, altered or removed
 - any damage caused by non-observance of the instruction manual
 - any non CE product
 - any product which has been attempted to be repaired by an non-qualified professional or without prior authorization by Techtronic Industries
 - any product connected to improper power supply (amps, voltage, frequency)
 - any product used with inappropriate fuel mixture (fuel, oil, percentage of oil)
 - any damage caused by external influences (chemical, physical, shocks) or foreign substances
 - normal wear and tear of spare parts
 - inappropriate use, overloading of the tool
 - use of non-approved accessories or parts
 - carburettor after 6 months, carburettor adjustments after 6 months
 - components (parts and accessories) subject to natural wear and tear, including but not limited to bump knobs, drive belts, clutch, blades of hedge trimmers or lawn mowers, harness, cable throttle, carbon brushes, power cord, tines, felt washers, hitch pins, blower fans, blower and vacuum tubes, vacuum bag and straps, guide bars, saw chains, hoses, connector fittings, spray nozzles, wheels, spray wands, inner reels, outer spools, cutting lines, spark plugs, air filters, gas filters, mulching blades, etc.
4. For servicing, the product must be sent or presented to a RYOBI authorized service station listed for each country in the following list of service station addresses. In some countries your local RYOBI dealer undertakes to send the product to the RYOBI service organisation. When sending a product to a RYOBI service station, the product should be safely packed without any dangerous contents such as petrol, marked with sender's address and accompanied by a short description of the fault.
5. A repair/replacement under this guarantee is free of charge. It does not constitute an extension or a new start of the guarantee period. Exchanged parts or tools become our property. In some countries delivery charges or postage will have to be paid by the sender.
6. This guarantee is valid in the European Community, Switzerland, Iceland, Norway, Liechtenstein, Turkey and Russia. Outside these areas, please contact your authorized RYOBI dealer to determine if another warranty applies.

AUTHORISED SERVICE CENTRES

ACD PLANT LTD

145 Southbank Road
Coundon
Coventry, West Midlands
CV6 1FG
Phone: 02476 594348
Email: danmcgunigle@acdplant.co.uk
Web: www.acdplant.co.uk

CBS Power Tools Limited

Unit 4, V P Square
Storeys Bar Rd, Fengate
Peterborough, Cambridgeshire
PE1 5YS
Phone: 01733 343031
Email: steve@cbspowertools.co.uk
Web: www.cbspowertools.com

C D Powertools

76 Old Road
Churwell Morley, Leeds

LS27 7TH
Phone: 0113 2718494
Email: info@cdpowertools.co.uk
Web : www.cdpowertools.co.uk

C J Sinclair Limited

44 Victoria Road
St Peters
Broadstairs, Kent
CT10 2UG
Phone: 01843 869400
Email: repairs@cjsinclairltd.co.uk
Web: www.cjsinclairltd.co.uk

Powertech Ind Ltd

Unit 2C, Ellison Road
Norwood Ind, Killamarsh
Sheffield, South Yorkshire
S21 2JG
Phone: 01142 474080
Email: stores@powertech-industrial.co.uk

Web: www.powertech-industrial.co.uk

RYCKO Technical Services LTD

104 Green Lane
St Albans, Herts
AL3 6EX
Phone: 08458 678790
Email: info@ryckotechnical.com
Web: www.ryckotechnical.com

ToolTech Industrial Equipment

227 E Dunhill Road, Macosquin
Coleraine, Co Londonderry
BT514LQ
Phone: 028 70359493
Email: john@tooltech.org.uk

For an updated list of authorised service centres, visit <http://uk.ryobitools.eu/header/service-and-support/service-agents>.

DECLARATION OF CONFORMITY

Techtronic Industries GmbH
Max-Eyth-Straße 10, 71364 Winnenden, Germany

Herewith we declare that the product

String trimmer
Brand: Ryobi
Model number: RLT26C
Serial number range: 44438201000001 - 44438201999999


is in conformity with the following European Directives and harmonised standards

2006/42/EC, 2004/108/EC, 2000/14/EC, 2005/88/EC, 97/68/EC, 2002/88/EC, 2004/26/EC, 2010/26/EU

And furthermore, we declare that the following (parts/clauses of) European harmonised standards have been used
EN ISO 11806-1:2011, EN ISO 14982:2009, EN ISO 3744:2010

Measured sound power level: 106.1 dB(A)
Guaranteed sound power level: 108 dB(A)

Conformity assessment method to Annex V Directive 2000/14/EC amended by 2005/88/EC.

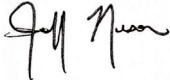

Floyd Jeffrey Nesom (BSME)
Senior Director of Engineering
Winnenden, Dec. 10, 2014



Authorised to compile the technical file:
Alexander Krug, Managing Director
Techtronic Industries GmbH
Max-Eyth-Straße 10, 71364 Winnenden, Germany



